


## 5.0 IR REMOTE

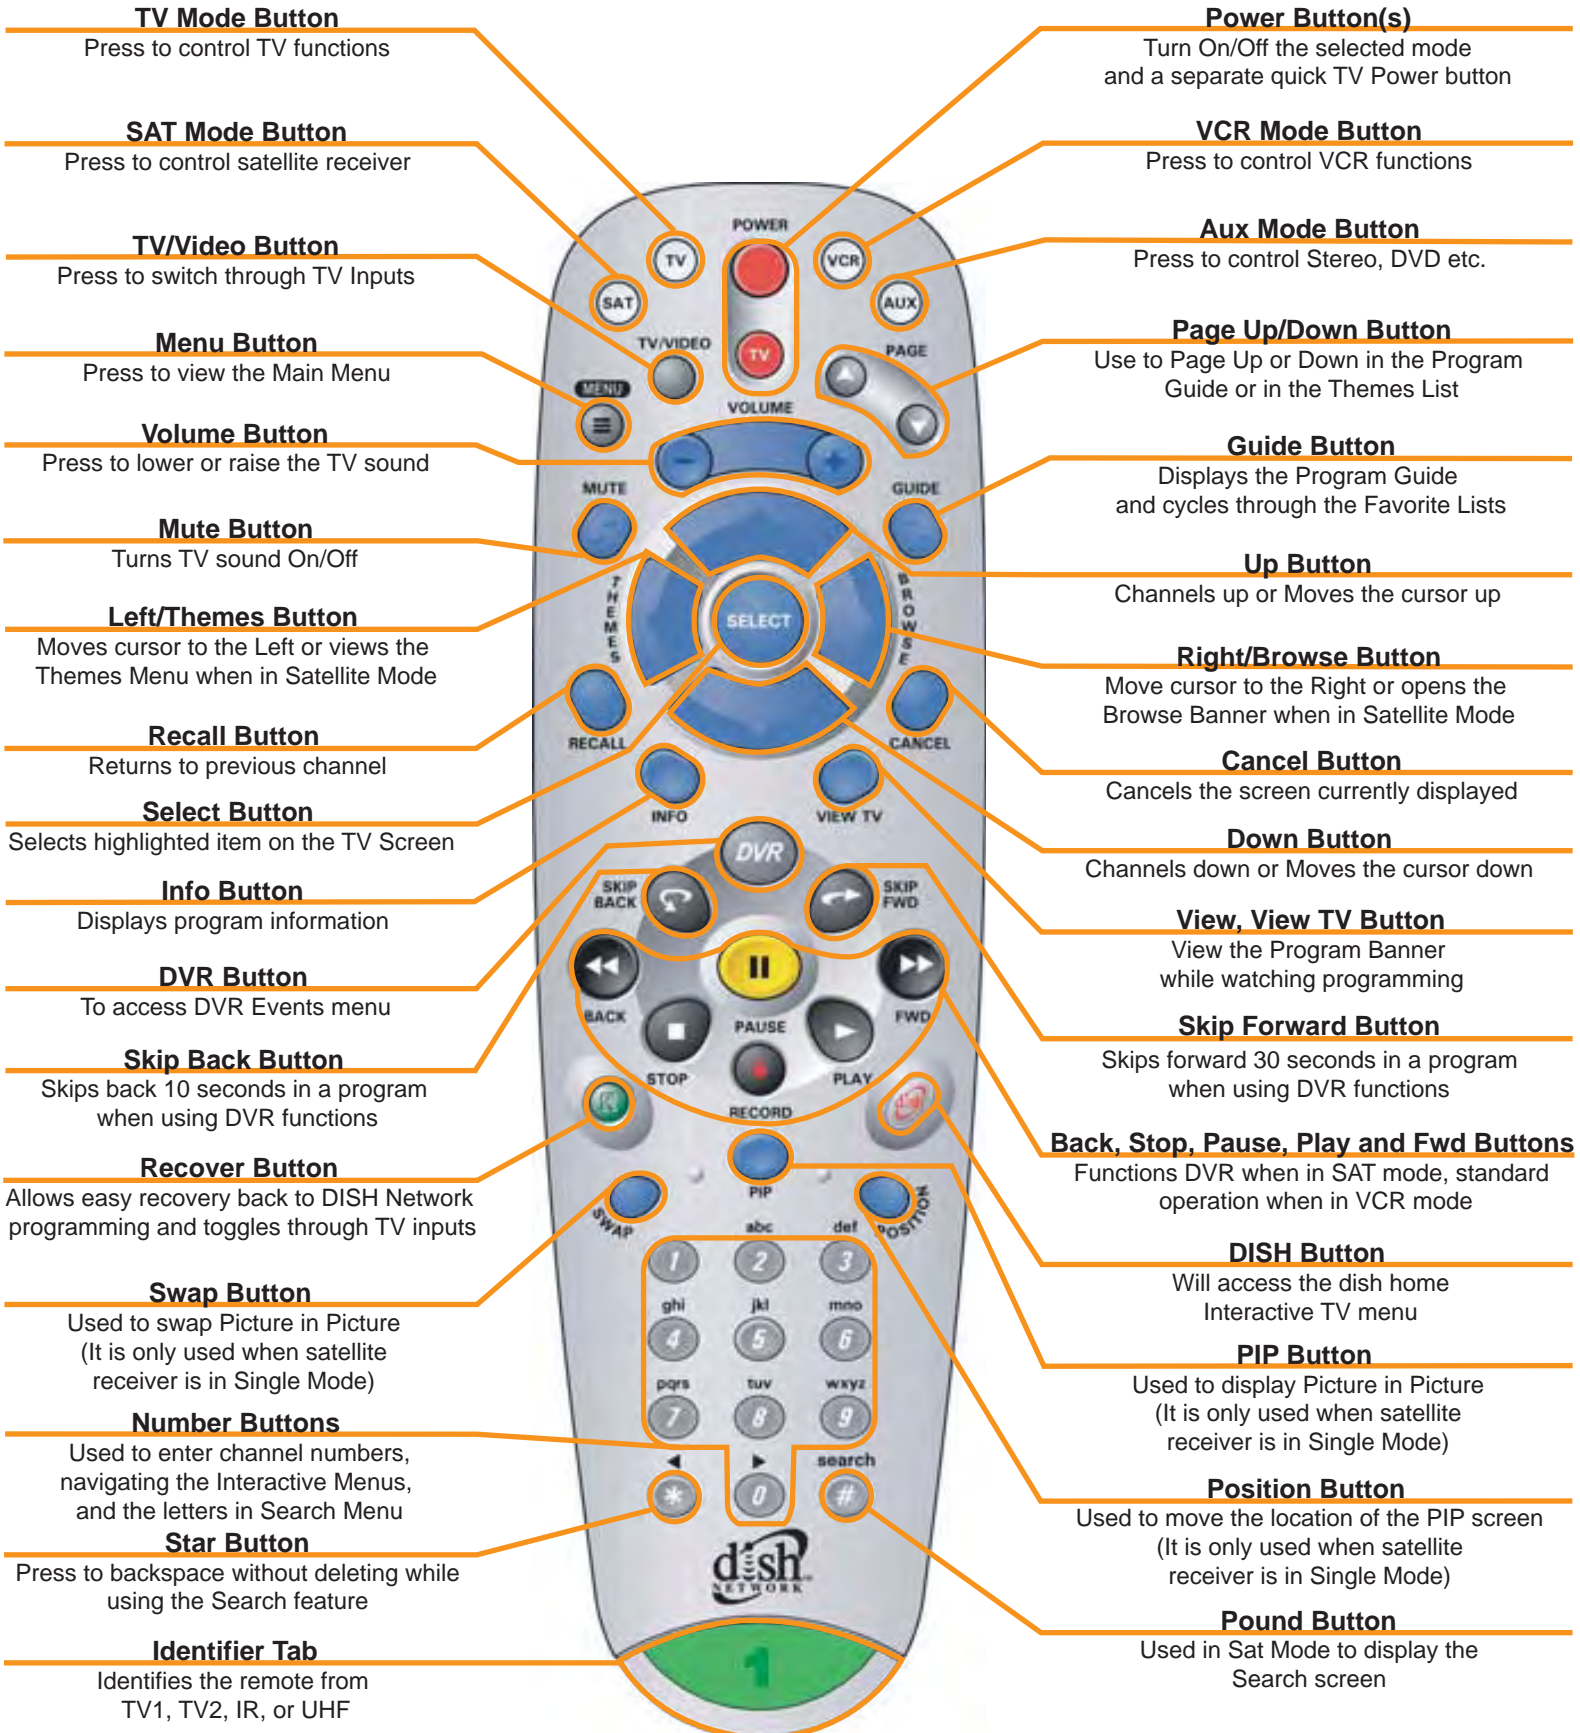

**TV Mode Button**

Press to control TV functions

**SAT Mode Button**

Press to control satellite receiver

**TV/Video Button**

Press to switch through TV Inputs

**Menu Button**

Press to view the Main Menu

**Volume Button**

Press to lower or raise the TV sound

**Mute Button**

Turns TV sound On/Off

**Left/Themes Button**

Moves cursor to the Left or views the Themes Menu when in Satellite Mode

**Recall Button**

Returns to previous channel

**Select Button**

Selects highlighted item on the TV Screen

**Info Button**

Displays program information

**DVR Button**

To access DVR Events menu

**Skip Back Button**

Skips back 10 seconds in a program when using DVR functions

**Recover Button**

Allows easy recovery back to DISH Network programming and toggles through TV inputs

**Swap Button**

Used to swap Picture in Picture (It is only used when satellite receiver is in Single Mode)

**Number Buttons**

Used to enter channel numbers, navigating the Interactive Menus, and the letters in Search Menu

**Star Button**

Press to backspace without deleting while using the Search feature

**Identifier Tab**

Identifies the remote from TV1, TV2, IR, or UHF

**Power Button(s)**

Turn On/Off the selected mode and a separate quick TV Power button

**VCR Mode Button**

Press to control VCR functions

**Aux Mode Button**

Press to control Stereo, DVD etc.

**Page Up/Down Button**

Use to Page Up or Down in the Program Guide or in the Themes List

**Guide Button**

Displays the Program Guide and cycles through the Favorite Lists

**Up Button**

Channels up or Moves the cursor up

**Right/Browse Button**

Move cursor to the Right or opens the Browse Banner when in Satellite Mode

**Cancel Button**

Cancels the screen currently displayed

**Down Button**

Channels down or Moves the cursor down

**View, View TV Button**

View the Program Banner while watching programming

**Skip Forward Button**

Skips forward 30 seconds in a program when using DVR functions

**Back, Stop, Pause, Play and Fwd Buttons**

Functions DVR when in SAT mode, standard operation when in VCR mode

**DISH Button**

Will access the dish home Interactive TV menu

**PIP Button**

Used to display Picture in Picture (It is only used when satellite receiver is in Single Mode)

**Position Button**

Used to move the location of the PIP screen (It is only used when satellite receiver is in Single Mode)

**Pound Button**

Used in Sat Mode to display the Search screen