

DISHPLAYER SR-100 REMOTE

Mode Button

Switches between TV and DishPlayer modes

Power Button

Press to turn on your TV

TV/Video Button

Press to switch through TV Inputs

Scroll Button

Used to page up or down in the TV Listings or Search results

Left Button

Allows you to move yellow box to select an item or position the cursor as needed

Go Button

Confirms your selection

Back Button

Takes you to the last page you were on

Mute Button

Turns TV sound On/Off

Volume Button

Controls TV volume

Power Button

Press to turn on your WebTV receiver

View Button

Switch between TV and Web viewing

Home Button

Goes to the TV Home or Web home page

Up Button

Allows you to move yellow box to select an item or position the cursor as needed

Right Button

Allows you to move yellow box to select an item or position the cursor as needed

Down Button

Allows you to move yellow box to select an item or position the cursor as needed

Recent Button

Shows you a list of recently viewed Web pages or TV channels in TV mode

Options Button

Opens and closes the Options panel

Number Buttons

Used to select channels you want to view or enter text in text fields. Press the 0 button to forward space when using the search function

Enter Button

Move WebPIP (TV window) while on the Web; enter a channel number

Channel Button

Change Satellite or TV channels

