

### 3.1 IR REMOTE

**TV Mode Button**  
Press to control TV functions

**SAT Mode Button**  
Press to control satellite receiver

**TV/Video Button**  
Press to switch through TV Inputs

**Menu Button**  
Press to view the Main Menu

**Volume Button**  
Press to lower or raise the TV sound

**Mute Button**  
Turns TV sound On/Off

**Select/Play Button**  
Selects highlighted item on the TV Screen or Play in VCR mode

**Left/Themes/Rewind Button**  
Moves cursor to the Left, views the Themes Menu when in Satellite Mode, and Rewind in VCR mode

**Recall Button**  
Returns to previous channel

**Info Button**  
Displays program information

**Sys Info Button**  
Displays the satellite receiver System Information Screen

**DISH Button**  
Will access the dish home Interactive TV menu

**Star Button**  
\*Press to backspace without deleting while using the Search feature

**Recover Button**  
Allows easy recovery back to DISH Network programming and toggles through TV inputs

**VCR Mode Button**  
Press to control VCR functions

**Aux Mode Button**  
Press to control Stereo, DVD etc.

**Power Button**  
Turn On/Off the selected mode

**Page Up/Down Button**  
Use to Page Up or Down in the Program Guide or in the Themes List

**Guide Button**  
Displays the Program Guide and cycles through the Favorite Lists

**Up Button**  
Channels up, Moves the cursor up, and Stops in VCR mode

**Right/Browse/Fast Forward Button**  
Move cursor to the Right, opens the Browse Banner when in Satellite Mode, and Fast Forward in VCR mode

**Cancel Button**  
Cancels the screen currently displayed

**Down Button**  
Channels down, Moves the cursor down, and Pause in VCR mode

**View TV Button**  
View the Program Banner while watching programming

**Record Button**  
Press to Record in VCR mode

**Number Buttons**  
Used to enter channel numbers, navigating the Interactive Menus, and the letters in \*Search Menu

**Pound Button**  
\*Used in SAT Mode to display the Search Screen

\* Only for applicable receivers