


6.3 IR/UHF PRO REMOTE

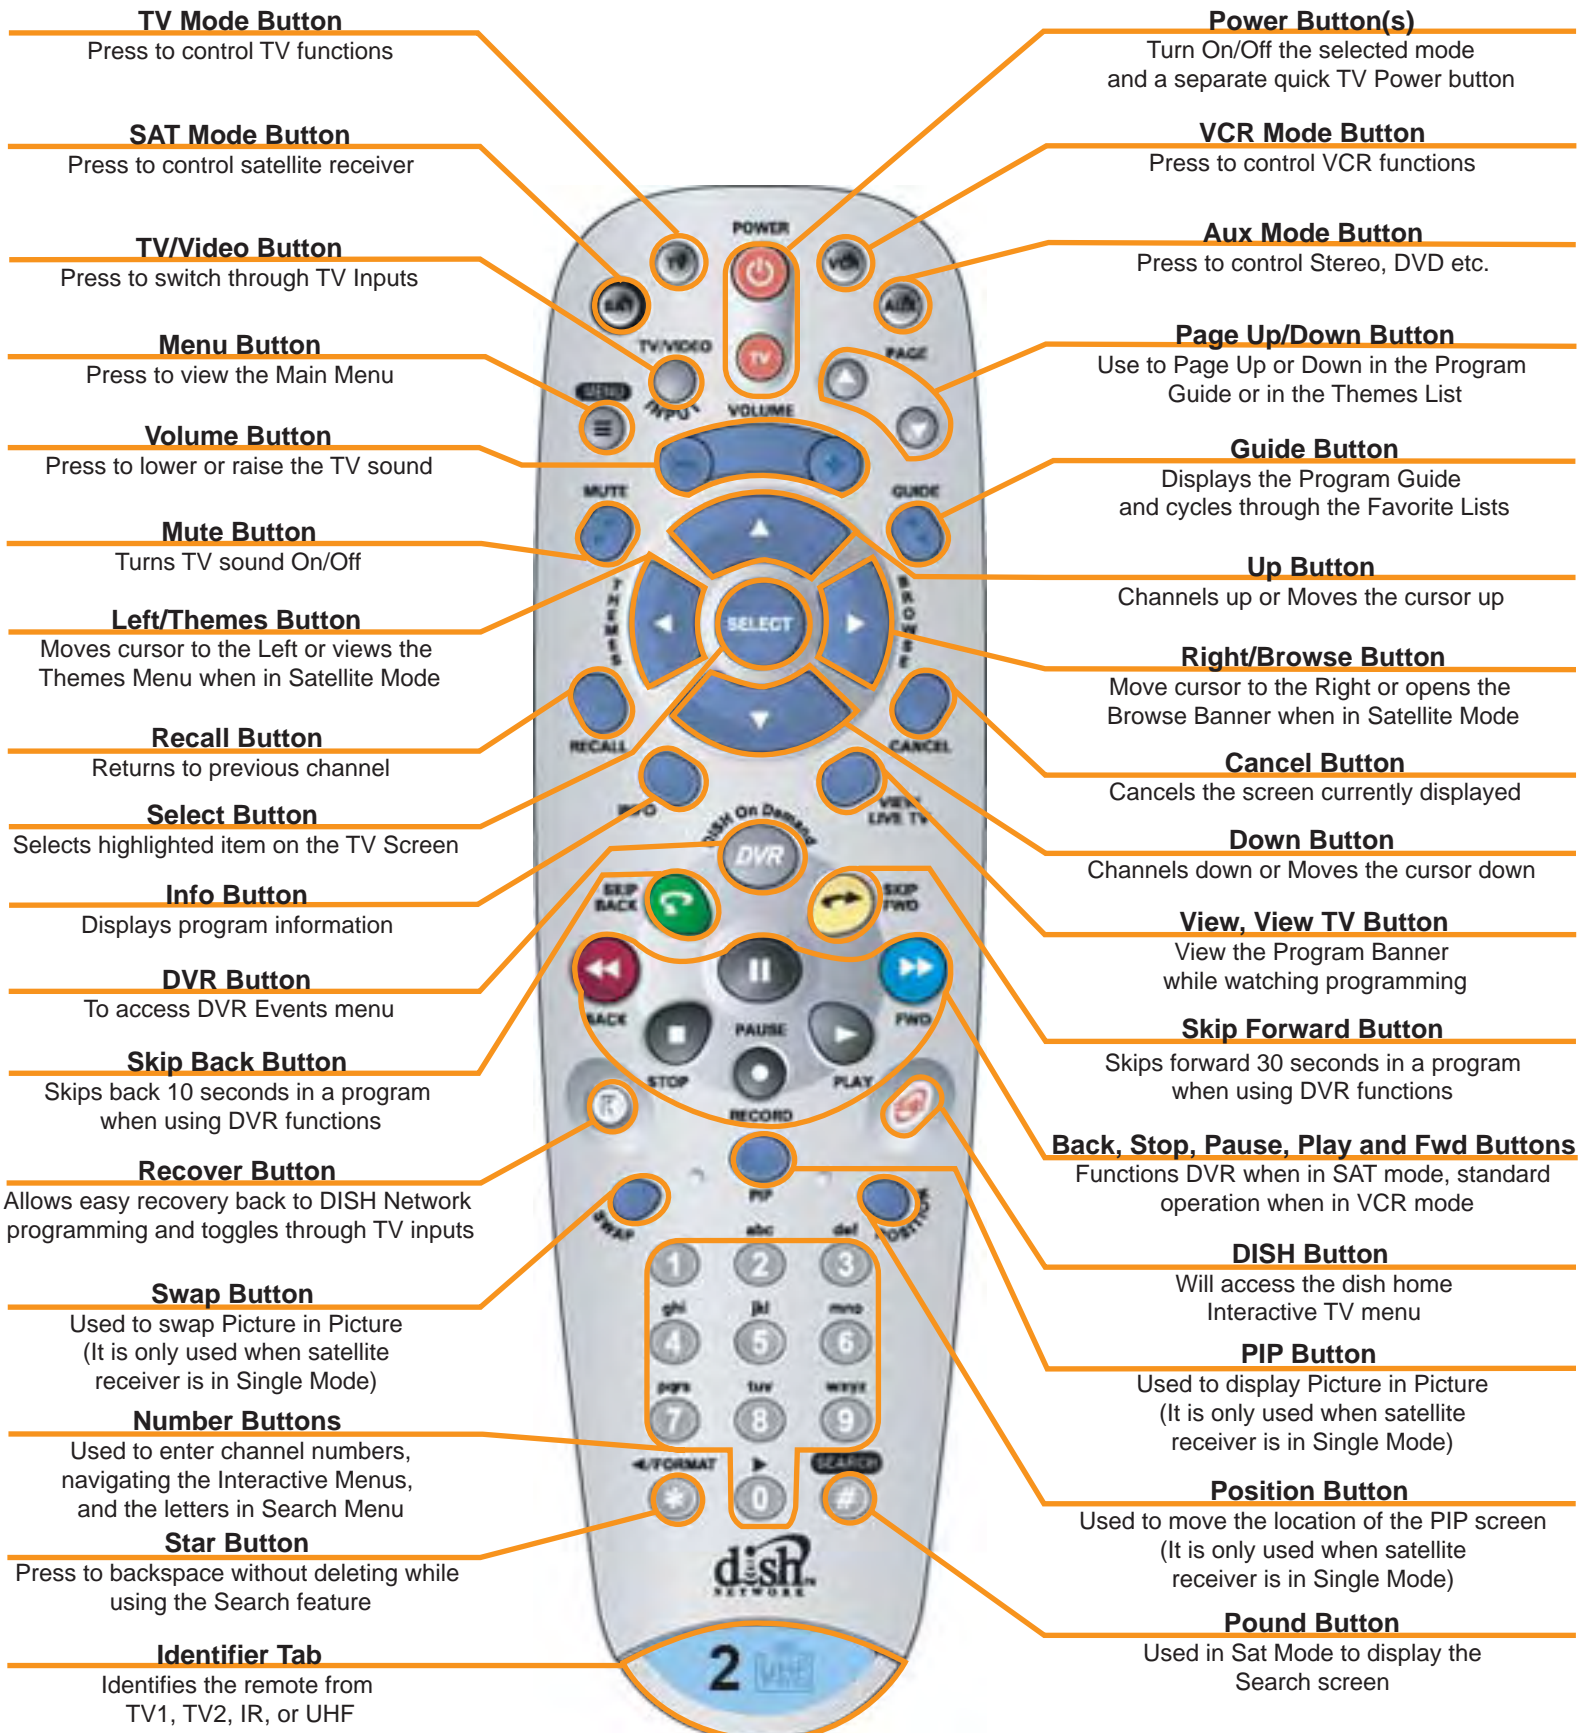

TV Mode Button

Press to control TV functions

SAT Mode Button

Press to control satellite receiver

TV/Video Button

Press to switch through TV Inputs

Menu Button

Press to view the Main Menu

Volume Button

Press to lower or raise the TV sound

Mute Button

Turns TV sound On/Off

Left/Themes Button

Moves cursor to the Left or views the Themes Menu when in Satellite Mode

Recall Button

Returns to previous channel

Select Button

Selects highlighted item on the TV Screen

Info Button

Displays program information

DVR Button

To access DVR Events menu

Skip Back Button

Skips back 10 seconds in a program when using DVR functions

Recover Button

Allows easy recovery back to DISH Network programming and toggles through TV inputs

Swap Button

Used to swap Picture in Picture (It is only used when satellite receiver is in Single Mode)

Number Buttons

Used to enter channel numbers, navigating the Interactive Menus, and the letters in Search Menu

Star Button

Press to backspace without deleting while using the Search feature

Identifier Tab

Identifies the remote from TV1, TV2, IR, or UHF

Power Button(s)

Turn On/Off the selected mode and a separate quick TV Power button

VCR Mode Button

Press to control VCR functions

Aux Mode Button

Press to control Stereo, DVD etc.

Page Up/Down Button

Use to Page Up or Down in the Program Guide or in the Themes List

Guide Button

Displays the Program Guide and cycles through the Favorite Lists

Up Button

Channels up or Moves the cursor up

Right/Browse Button

Move cursor to the Right or opens the Browse Banner when in Satellite Mode

Cancel Button

Cancels the screen currently displayed

Down Button

Channels down or Moves the cursor down

View, View TV Button

View the Program Banner while watching programming

Skip Forward Button

Skips forward 30 seconds in a program when using DVR functions

Back, Stop, Pause, Play and Fwd Buttons

Functions DVR when in SAT mode, standard operation when in VCR mode

DISH Button

Will access the dish home Interactive TV menu

PIP Button

Used to display Picture in Picture (It is only used when satellite receiver is in Single Mode)

Position Button

Used to move the location of the PIP screen (It is only used when satellite receiver is in Single Mode)

Pound Button

Used in Sat Mode to display the Search screen