

JVC IRR REMOTE

Mode Button

Press to change the operational mode of the Remote (mode)

Power Button

Turn On/Off the satellite receiver

TV/VCR Button

Press to switch through TV Inputs

Menu Button

Press to view the Main Menu

Mute Button

Turns TV sound On/Off

Guide Button

Displays the Program Guide and cycles through the Favorite Lists

Volume Button

Press to lower or raise the TV sound

Up Button

Channels up or Moves the cursor up

Left/Theme Button

Moves cursor to the Left and views the Themes Menu when in Satellite Mode

Right/Browse Button

Moves cursor to the Right and opens the Browse Banner when in Satellite mode

Select Button

Selects highlighted item on the TV Screen

Down Button

Channels down or Moves the cursor down

Info Button

Displays program information

Cancel Button

Cancels the screen currently displayed

Address Button

Change remote address

View Button

View the Program Banner while watching programming

Record Button

Press to record program onto tape in VCR mode

Number Buttons

Used to enter channel numbers, navigating the Interactive Menus or D-VHS functions

Stop Button

Press to stop play back in VCR mode

Recall Button

Returns to previous channel

Rewind Button

Press to rewind in VCR mode

Pause Button

Press to pause VCR tape

Play Button

Press play to watch VCR tape

Fast Forward Button

Press to forward the VCR tape

